



10N F/W force update procedure:

1. Unzip the F/W pack and copy the files to the root directory of SD card.

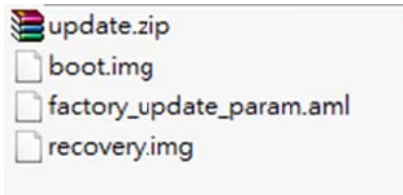


2. Insert SD card in display device.

3. Make sure the power is off, hold the device with your left hand, press and hold the menu button (button #4). Switch on the power with your right hand while the menu button is still pressed.

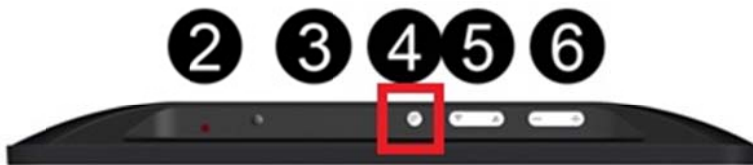

4. Only release the menu button when you see the Android robot logo and progress bar appeared.

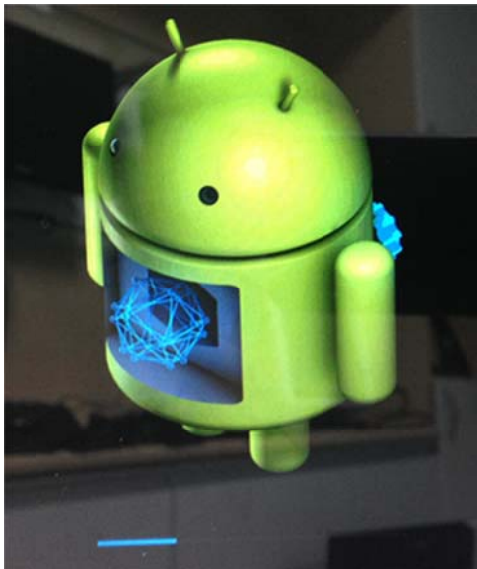

5. The display will reboot, wait for a few minutes. Do not turn off the machine.

6. After reboot, the system will be upgraded to the latest F/W.