

---

**10/100/1000T to 1000SX/LX SFP**

**Media Converter**

**Gigabit Triple-speed Converter**

# **User's Manual**

(December 2006)

---

## COPYRIGHT

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, whether electronic, mechanical, photo copying, recording or otherwise, without the prior written permission of the publisher.

## FCC WARNING



This equipment has been tested and found to comply with the limits for a class A device, pursuant to part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. Operation of this equipment in a residential area is likely to cause harmful interference, in which case, the user will be required to correct the interference at the user's own expense.

CE



This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Take special care to read and understand all the content in the warning boxes:



**Warning**

## TABLE OF CONTENTS

1	ABOUT THIS GUIDE.....	1
1.1	Welcome.....	1
1.2	Purpose .....	1
1.3	Terms/Usage .....	1
1.4	Features .....	1
1.5	Specifications .....	2
1.6	Package Contents .....	2
2	HARDWARE DESCRIPTION .....	3
2.1	Product Overview .....	3
2.2	Product Illustrations .....	4
2.3	DIP Switches .....	4
3	LED INDICATORS .....	5
4	INSTALLATION.....	6
4.1	Location .....	6
4.2	10/100/1000Base-T Port (RJ-45).....	6
4.3	Gigabit SFP Slot .....	6
4.4	Link Fault Signaling .....	7
4.5	Desktop Installation .....	7
4.6	Powering On the Unit .....	7
5	APPENDIX: APPLICATION DIAGRAMS.....	8
5.1	Application Diagram I .....	8
5.2	Application Diagram II .....	8
6	APPENDIX: MINI CONVERTER CHASSIS.....	9
6.1	Mini Converter Chassis.....	9
6.2	Features .....	9
6.3	Affixing Brackets.....	9
6.4	Installing the Converter.....	10
6.5	Rear view of Chassis and specifications.....	10
6.5.1	Rear View of Chassis with AC Power Supply.....	10
6.5.2	Rear View of Chassis with DC Power Supply .....	10

# 1 About This Guide

## 1.1 Welcome

Thank you for choosing this 10/100/1000Base-T to 1000Base-SX/LX (SFP) Media Converter. This device integrates Gigabit Ethernet triple-speed copper segments and Gigabit fiber segments in a highly flexible package.

## 1.2 Purpose

This guide discusses how to install and configure your 10/100/1000Base-T to 1000Base-SX/LX (SFP) Media Converter.

## 1.3 Terms/Usage

In this guide, the term “Converter” (first letter upper case) refers to your 10/100/1000Base-T to 1000Base-SX/LX (SFP) Media Converter, and “converter” (first letter lower case) refers to other converters.

## 1.4 Features

### Standards:

- IEEE 10/100Base-TX
- IEEE 802.3ab 1000Base-T
- IEEE 802.3z 1000Base-SX/LX

### Interface:

- One 10/100/1000 Mbps Ethernet port
- Auto MDI/MDI-X support on RJ-45 port
- One SFP slot for Gigabit Ethernet link
- Extends distances up to 500m (1,650ft) for multi-mode fiber module, 110km (317,625ft) for single-mode fiber module (depends on SFP)

### Management:

- Alarm LED illuminates to indicate link failure
- Status LEDs for easy monitoring of device’s status

### Mechanical & Environmental:

- External power supply
- Chassis-compliant (internal power supply)
- FCC Class A & CE approved

## 1.5 Specifications

<b>Standards:</b>	IEEE 802.3 (10BASE-T Ethernet); IEEE 802.3u (100BASE-TX/ Fast Ethernet); IEEE 802.3ab (1000Base-T); IEEE 802.3z 1000Base-SX/LX	
<b>Connectors:</b>	1x RJ-45 1x Fiber SFP	
<b>Max. Distance:</b>	UTP: 100m (Cat 5/5e/6) Fiber Optic: SFP; up to 500m (multi-mode), 110km (single-mode)	
<b>Cable:</b>	Multi-mode fiber optic: 50/125 or 62.5/125um Single-mode fiber optic: 9/125um Copper: Cat 5/5E/6	
<b>Data Rates:</b>	Fiber: 1000 Mbps Copper: 10/100/1000Mbps	
<b>Unit LED:</b>	PWR:	Illuminated for normal operation
	ALM:	Illuminated when failure occurs on fiber or copper link
	LNK/ACT: (Fiber-link)	Illuminated when receiving link pulses from compliant devices  Flashing when data packets being transmitted or received via fiber port
<b>DIP Switches:</b>	DIP 1 – LFS: Enable/disable Link Fault Signaling (LFS)	
<b>Power:</b>	12V DC @ 0.8A, external power supply adapter Frequency: 50Hz to 60Hz	
<b>Environment:</b>	Temperature:	Operating: 0°C to 50°C
	Relative Humidity:	10% to 90%, non-condensing
	Storage:	-20°C to 70°C
	Relative Humidity:	5% to 90%, non-condensing
<b>Emissions:</b>	FCC Part 15 of Class A & CE approved	
<b>Dimensions:</b>	110 x 74 x 23.4mm (L x W x H)	

## 1.6 Package Contents

The package should include the following:

- One Converter unit
- One power adapter (please check connector type and input power specification)
- Four self-adhesive pads
- User's Manual

## 2 Hardware Description

### 2.1 Product Overview

The 10/100/1000Base-T to 1000Base-SX/LX (SFP) Media Converter is primarily designed for larger workgroups, which demand higher speed and broader bandwidth and requires migration and expansion from copper-based Gigabit triple speed to Fiber-based Gigabit networks.

It features an automatic MDI/MDI-X on the RJ-45 port that allows for direct connection to a workstation, switch or hub. Now, the network manager does not need to worry about the cable configuration (crossover or straight through) when establishing connection between RJ-45 ports.


It features both an RJ-45 jack and an SFP slot which allows it to easily integrate a 1000Base-T network with a 1000Base-SX/LX fiber network.

If the LFS DIP switch is set to ON, the Link Fault Signaling function is enabled. If the copper link is down, the fiber port will be disabled by the Converter. If the fiber port loses signal, the copper port will be disabled by the Converter. These two types of disabling actions will enable the spanning tree protocols of the neighboring switch to go into effect.


The Media converter is specifically designed to offer fiber advantages for mission-critical networks like Telco/ISP backbones, cable operators, banking and enterprise networks. It can reduce network downtime and increase Quality of Service levels.

## 2.2 Product Illustrations

### Front Pane

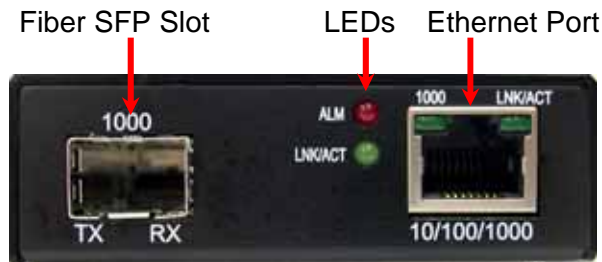

### Rear Panel

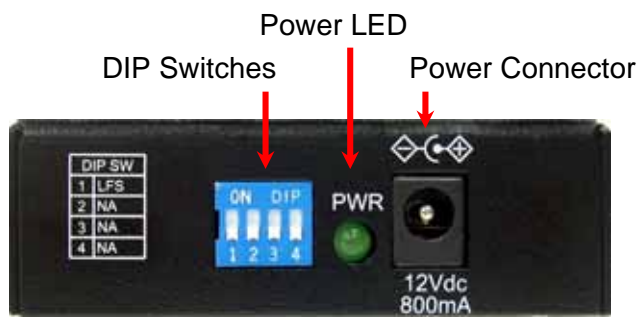

## 2.3 DIP Switches

DIP 1	Enables / disables Link Fault Signaling (LFS)
DIP 2	N/A
DIP 3	N/A
DIP 4	N/A

### 3 LED Indicators

This Device has LED indicators located at the front of the device. The LEDs have been designed to give easy at-a-glance network status, and provide 'real-time' connectivity information. Please see below for an interpretation of their functions:

LED Indicators		
LED	Condition	Status
PWR	On (Green)	Unit is receiving power
	Off	Power off or failure
LNK / ACT	On (Green)	Fiber link up
	Flashing (Green)	Data packets being transmitted or received via Fiber port
	Off	Fiber link down
1000	On (Green)	1000 Base Mode
	Off	10/100 Base Mode
Port LNK/ACT	On (Green)	Copper link up
	Flashing (Green)	Data packets being transmitted or received via Ethernet port
ALM	On (Red)	Any link failure or LFS

## 4 Installation

In this chapter, we will take a look at how to install the Converter within its operating environment. To install your Media Converter, please see the following procedures:

- Location
- 10/100/1000Base-T port
- Gigabit SFP slot
- Link Fault Signaling
- Desktop installation
- Powering on unit

### 4.1 Location

The location selected for installing the Converter may greatly affect its performance. When selecting a site, we recommend considering the following rules:


1. Install the Converter in a fairly cool and dry place. See *Technical Specifications* for the acceptable temperature and humidity operating environments.
2. Install the Converter in a location free from strong electromagnetic field generators (such as motors), vibration, dust, and direct exposure to sunlight.
3. Leave at least 10cm of space at the front and rear of the unit for ventilation.
4. Affix the provided rubber pads to the bottom of the Converter for grip, and to protect the case from scratching.

### 4.2 10/100/1000Base-T Port (RJ-45)

The auto MDI/MDI-X and auto-negotiation on the RJ-45 port alleviates the worry of cabling configuration when connecting the Converter with a 10/100/1000Base-T device. It accepts both 'straight-through' and 'cross-over' Ethernet cables without the need to re-configure the port. Whether connecting to a switch, LAN card, or other network device via the RJ-45 port, simply plug and go!

### 4.3 Gigabit SFP Slot

To connect a fiber cable's connector to the Converter's SFP slot, slide the selected SFP module (mini-GBIC) into the SFP slot, making sure that the module's receptors line up with the receptors at the back of the slot. Push until you hear a click. Once the module is inserted correctly, take the cable connector and turn it so that it will fit into the mouth of the module. Then push the connector into the mouth until its catches click into the receiving grooves in the module's mouth. Use the appropriate type of multi-mode or single-mode fiber, depending on the SFP module being used. The fiber optics transmit data at up to 1000Mbps and can maintain data integrity over cable distances as long as 60km, depending on the selected SFP (mini-GBIC) module.

**Warning:**  
 **Because invisible laser radiation may be emitted from the aperture of the fiber port when no cable is connected, avoid exposure to laser radiation and do not stare into the open apertures.**

#### 4.4 Link Fault Signaling

LFS is an important function that is extremely beneficial in terms of network status monitoring. The LFS function monitors both the copper and fiber segments to ensure that the STP can kick in the moment a link failure occurs on either segment.

Set LFS to **ON** for normal operations.

Set LFS to **OFF** when installing cables or when testing the network connection.

**Note:** The LFS feature influences both fiber and copper segments. When disruption occurs on the copper segment, the fiber segment will be disabled. When the fiber segment loses signal, the copper segment will be disabled.

To utilize the full benefits of LFS, four converters can be used to build a primary and a secondary path between two switches. The switches must support Spanning Tree or Fast Spanning Tree protocols. By default, transmission of data will travel via the primary path. If a link failure is detected, transmission will automatically be switched to the secondary path by Spanning Tree Protocol, delivering non-stop network connectivity.

#### 4.5 Desktop Installation

Follow the instructions listed below to install the Converter in a desktop location.

1. Locate the Converter in a clean, flat and safe position that has easy access to AC power.
2. Affix the four (4) self-adhesive rubber pads to the underside of the Converter.
3. Apply AC power to the Converter. (The green PWR LED on the rear panel should light).
4. Connect cables from the network partner devices to the ports on the front panel. (The green LNK LED on the front panel associated with the port should light).

This converter can also be mounted on a vertical surface.

**Warning:**



**Please exercise caution when using power tools. Also, install this unit away from damp or wet locations, or in close proximity to very hot surfaces. These types of environments can have a detrimental effect on the converter and cables. An ideal location is a lightly cooled place such as a typical equipment room.**

#### 4.6 Powering On the Unit


The Converter uses an external power supply of 9~32V DC @ 0.8A – 50Hz to 60Hz.

1. Insert the power cable plug directly into its receptacle located at the back of the device.
2. Plug the power adapter into an available socket.
3. Check the rear-panel LEDs as the device is powered on to verify that the Power LED is lit. If not, check that the power cable is correctly and securely plugged in.

## 5 Appendix: Application Diagrams


### 5.1 Application Diagram I

In the figure below, the Converter is functioning as a high-speed bridge between switches, creating increased capacity for each user (node) on the local area network. It is providing a 10/100/1000Mbps full duplex link to a variety of Fast Ethernet or Gigabit network devices within a LAN.

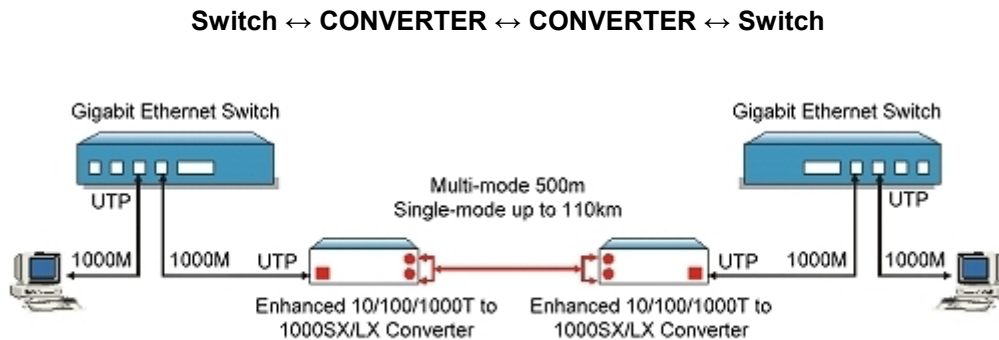

### 5.2 Application Diagram II

In the figure below, the Converter is functioning as a server aggregation for an enterprise or LAN configuration. It is providing a 10/100/1000Mbps full-duplex link to a workgroup of 10/100/1000 switches located on separate floors within a single building.

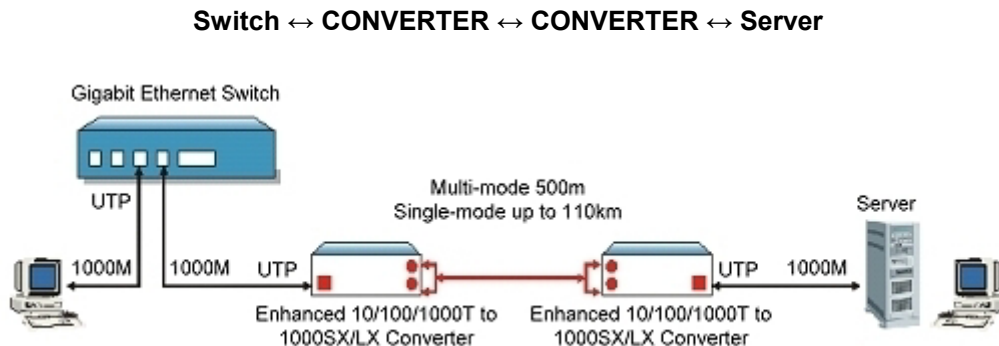

## 6 Appendix: Mini Converter Chassis

### 6.1 Mini Converter Chassis

The Chassis is developed to accommodate just one media converter. The Chassis provides AC or DC power protection for converter units.

Now, network designers can plan their Ethernet, Fast Ethernet, ATM, or Gigabit networks without having to worry about the power source. Also, its uniquely compact size allows it to be installed in locations where space is limited.

### 6.2 Features

- Simple and easy to install
- Adds fiber connectivity to otherwise copper-based networks
- Supports 10/100/1000Base-T, copper, fiber, single/multi-mode, ST, SC, MT-RJ, VF-45, LC, WDM connector converters
- Supports one media converter
- Suitable for networks of all sizes in all locations
- Provides internal AC and DC switching power supply
- Made from high-quality durable steel
- Optional external redundant power adapter

### 6.3 Affixing Brackets

We have supplied 2 special brackets that easily attaches to the Converter. This allows for the secure placement of the Converter into the Chassis. It also seals off the front of Chassis and allows it to function correctly.

**Step 1 Using a Phillips screwdriver; remove two screws from the side panels on the converter.**




**Step 2 Place the converter and brackets on a flat horizontal surface as illustrated above. Secure the brackets by replacing the screws.**




**Ensure that the rails are flush with the underside of the Converter. The Converter is now ready for loading into the Chassis.**

## 6.4 Installing the Converter in the Chassis

Once the Converter has been attached to the bracket, it can be installed into the Chassis. Special care must be taken to ensure the correct mating of the power connector. Align the Converter so that it fits between the upper and lower guide rails.

**Warning:**  
 Always ensure that the converter power socket is positioned at the base of the Chassis. Never force the Converter into the Chassis - check power socket position and alignment.

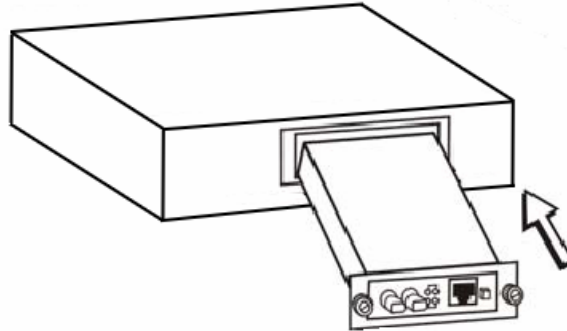

## 6.5 Rear view of Chassis and specifications



### 6.5.1 Rear View of Chassis with AC Power Supply

Power: 100 - 240V AC (Optional 12V Adapter)

Dimensions: 109 x 174 x 44.3 mm (L x W x H)



### 6.5.2 Rear View of Chassis with DC Power Supply

Power: -48V DC (Optional 12V Adapter)

Dimensions: 109 x 174 x 44.3 mm (L x W x H)